



Lively Living

innovation style wellbeing

www.livelyliving.com.au





Aroma-Sound

Aromatherapy Diffuser | Ioniser
Humidifier | Air Purifier | Mood Light



Table of Contents

- A. Function
- B. Specification
- C. Operation
- D. Maintenance
- E. Troubleshooting

The Aroma-Sound is part of Lively Living's extensive range of premium quality Ultrasonic Diffusers & Essential Oils designed to enhance your life & wellbeing.

Congratulations on your purchase of the Ultrasonic Aroma Diffuser. Please keep this manual for further reference and maintenance.

A. Function

Innovative, modern & stylish the Aroma-Sound cool-mist diffuser takes your aromatherapy experience to the next level.

Incorporating purified mist, aromatherapy, colour therapy lights and a library of relaxation sound tracks, the Aroma-Sound will soothe all your senses. These impressive features are controlled by the convenient remote control.

The colour changing lights may also be set to a specific colour or switched off while diffusing your favourite essential oils.

Enjoy!


B Specification

Product Size: 123mm x 194mm

Voltage: DC 24V

Power: 12W


Water Tank Capacity: 150ml

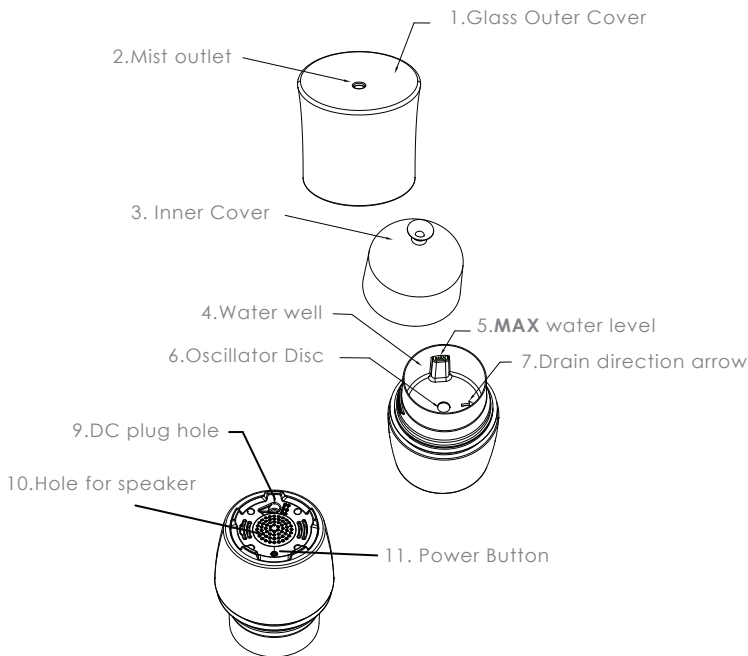

C. Operation

POINTS TO CONSIDER BEFORE USE:

- Place the Aroma Diffuser on a dry and even surface
- **DO NOT** use detergents, solvents or aggressive agents to clean the diffuser
- Use only clean, room temperature water to fill the water tank
- Make sure you disconnect the diffuser from the power supply before commencing any cleaning
- 100% pure essential oils are recommended for use
- Empty and rinse water tank and wipe dry with a clean cloth every time you use a different type of essential oil.

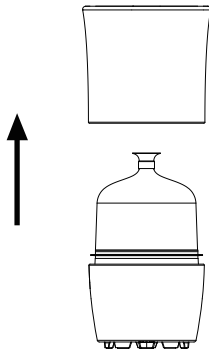



Note:

DO NOT lean, move or attempt to empty or refill during operation.

1. Remove the two covers.



**DO NOT EXCEED THE MAX
WATER LEVEL LINE.**

2. Fill the water tank with water to the indicated water line.

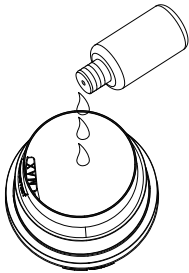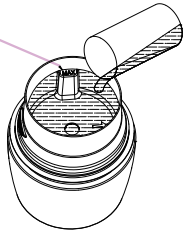

3. Add 2-3 drops of your favourite essential oil into the water.

4. Replace the two covers

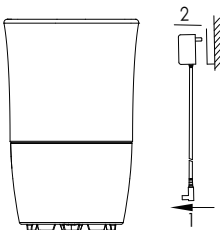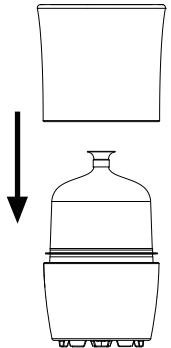

5. Plug in the adaptor and use the remote control to operate as per following instructions

Remote Button Functions



Mist Control:

First Press: Continuous mist mode

Second Press: Intermittent mist mode

Third Press: Mist switched off

Turn off all functions - Press & hold  for 3 seconds



Music Control:

1st Press: Calming Meditation Music

2nd Press: Dreamy Relaxation Music

3rd Press: Soothing Background Music


4th Press: Rolling Ocean Waves

 
5th Press: Rain Sound with Pink Noise Frequencies

6th Press: Pink Noise sleep therapy

7th Press: Turn off music

8th Press: Start Track 1 again

Turn off music - Press & hold  for 3 seconds

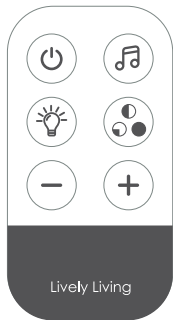

Volume Down



Volume Up



Light Control:

First Press: Colour Changing Light ON

Second Press: Set the light on a specific colour of choice

Third Press: Light switched OFF

Turn off Lights - Press & hold  for 3 seconds



Light Dimmer: (Only when the light is on)

First Press: Dimm light to 70% brightness

Second Press: Dimm light to 40% brightness

Third Press: Light back to 100% Brightness

 


Manual Power Button (under base of diffuser) Basic functions only

First Press: Continuous mist mode & Colour Changing Light

Second Press: Continuous mist mode (light off)


Third Press: Turn off the unit

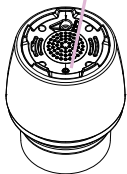

Auto Switch Off:


As with all Lively Living Ultrasonic Diffusers the Aroma-Sound will switch off automatically when water is depleted.

 D. Maintenance

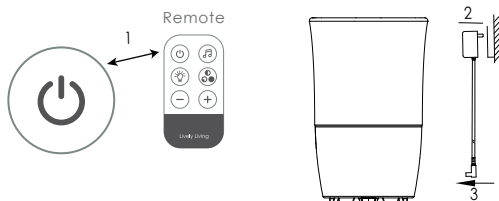


1. Press and hold the power button on your remote control (for 3 seconds) to turn off the unit. Unplug the power adapter from the power point then from the diffuser.

 2. Remove the outer and inner covers.

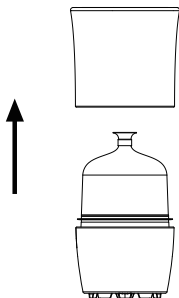






WARNING: DO NOT empty water from the air vent side, or allow water to enter this air vent hole

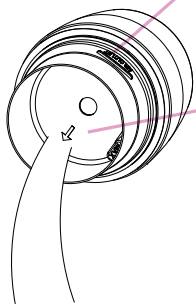

3. Empty water from the side directed by the arrow in bottom of the water tank

4. Regularly use a damp cloth to clean the exterior of the unit.

Regularly use a clean swab/cloth to clean the water tank and ceramic disc.

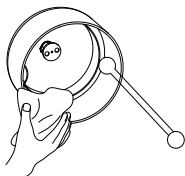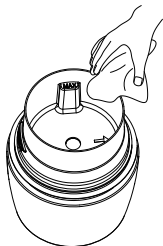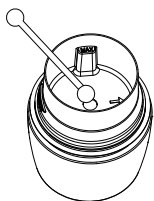

E. Troubleshooting

LOST REMOTE

Replacement remote controls can be purchased from www.livelyliving.com.au (under accessories)

Basic Mist & Light functions can be activated using the small power button located underneath the diffuser base.

Please be mindful of where you keep your remote control.

NO MIST

Possible Cause	Solution
Power supply is not connected	Plug in the power and press the MIST Button
Insufficient Water (Lower than the sensor)	Refill with sufficient clean water
Too much water Exceeds max water line	Pour away excess water
Mist outlet is blocked by water residue	Keep the mist outlet clean and ventilated

NO LIGHT

Possible Cause	Solution
Lamp button is not pressed	Connect the power and press the LIGHT button to activate the light
Sleep mode (no light) is ON	

Cleaning

As essential oils are a natural, potent and powerful substance, it is important to pay attention to the care and regular cleaning of your Ultrasonic Diffuser.

We recommend to wipe out your diffuser with a cloth or paper towel after every couple of uses. Please do not leave essential oil residue sitting in the bottom of the diffuser for extended periods of time. Please ensure the ceramic disc at the bottom of the diffuser is cleaned regularly with a cotton bud.

Warning

- In case of abnormal situations such as smoke, peculiar smells and cacophony etc, any further use may result in an accident, such as fire or electric shock. You should unplug the adaptor immediately and contact your local dealer.
- Never wrap the adaptor with cloth or paper when on, as it can not dissipate the heat properly, which may damage the unit.
- Never attempt to disassemble or repair the product yourself. In case of internal inspection or repair, please contact your local dealer.
- Keep the product out of reach of children to avoid injury.